




NO.	A	B	C	D	E	F	G
DE	Wand Profil	M5 Mutter	Konisches Profil	Radiator Halterung	Radiator Halterung	Schraube M5 x 70	Abdeckplatte
NL	Wand profiel	Moer M5	Conisch profiel	Radiator houder	Radiator houder	Bout M5 x 70	Afdekplaatje
EN	Installing sleeve	M5 nut	Conical sleeve	Clamp cube	Clamp cube	screw M5 x70	Cover
Qty.	4	4	4	4	4	4	4

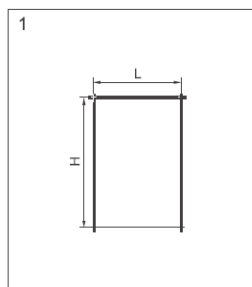


Definieren Sie die Position des Radiators an der Wand.(1)

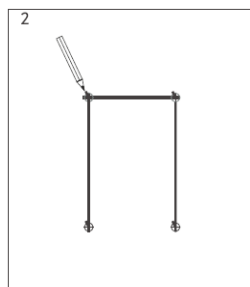


Markieren Sie die Bohrlöcher, für die Schrauben in der Wand. Bohren Sie die Löcher.(2)

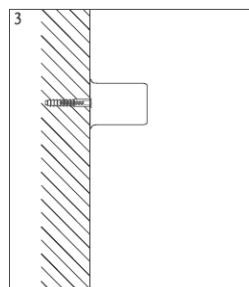

Schrauben Sie die Wand Profile an der Wand fest.(3)

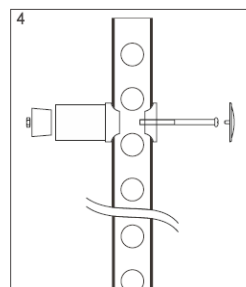

Schieben Sie die konischen Profile und die Radiator Halterungen in die Wand Profile. (4)

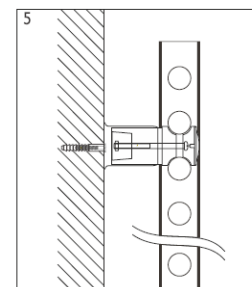

Fixieren Sie den Radiator, indem Sie die Schrauben fest andrehen. (5)

Bepaal de positie van de radiator op de wand.(1)

Markeer de boorgaten voor de schroeven in de wand. Boor de gaten.(2)

Schroef de wandprofielen tegen de wand.(3)

Schuif het conisch profielen en radiator houders in de wand profielen. (4)

Fixeer de radiator door de schroeven stevig aan te draaien. (5)

Define the location of the radiator on the wall.(1)

Mark with a pencil the points of drilling the holes for stretcher plugs. Drill holes.(2)

Screw installing sleeves to the wall. (3)

Put conical and expansible sleeves into the installing sleeve (4)

Fasten the radiator by screwing the cube with expansible sleeve (5)

